



BEACH BOOMBOX WATER RESISTANT BLUETOOTH BOOMBOX

Part# MVABB1GW
Instruction Manual

Please Read All Instructions Carefully
and Retain for Future Use.

fins up!

Congratulations on purchasing your very own Beach Boombox from MTX Margaritaville Audio! It is the perfect personal party music player designed to travel with you wherever you may go! Not only is the Beach Boombox a Bluetooth speaker, but it also allows you to load your own music on to a Micro SD card and play through the TF card reader... This allows you to ditch your phone and business calls for uninterrupted vacation mode! But if you must keep your smart device with you, the Bluetooth controls & plays music up to 30 feet away or you can plug in directly via the 3.5mm aux input if you must. All these great features and we still were able to squeeze in an FM radio too! Yep... Radio still exists!!! Don't let the cute color & size fool you, this bite size boombox packs a kick and can play up to 6 hours!

Things Not To Do

We don't want to be a party pooper and rain on your parade but... here are some common sense things the legal team said we should tell you: Do not throw or submerge in water. This is "splash-proof" and not intended for your next submarine adventure. Sure this Beach Boombox is for the outdoors but never leave electronics in direct sunlight, near open flame or on the BBQ grill. Never open unit up. Internal battery & high tech electronics are sophisticated things and should not be tampered with. Even if you can fix a toaster or you have a fancy tech school certificate, internal parts are NOT user serviceable. This type of abuse is never covered under warranty ever. Don't go burying it in the sand either. Read on...

Things To Do

All internal battery electronics should be fully charged before use. Plug this thing in when you first unwrap it until it is fully charged, then unplug. This will prolong battery life. Use unit until recharge is required. This will keep the battery happy and extend its life. Enjoy your new speaker & turn it up! Just keep in mind moderate levels prolong listening time and reduce distortion caused by over cranking the volumes on both your smart device and the Bluetooth speaker. Make sure you read the rest of the "operational" control instructions for each function below. That's it! You have been schooled enough through the University of Margaritaville Audio. Now go enjoy some tunes and take a well-deserved tropical vacation with your MTX Margaritaville Audio speaker!

Beach Boombox Controls & Features

Your Bluetooth device must support AVRCP in order to operate remote functions (AVRCP is fancy electronic talk for Audio/Video Remote Control Profile)

Turn Power On/Off

The main power switch is located on the back under the silicone "splash flap". Keep switch in Off position to save power when not in use. Make sure flap is put back into it's snug position as this helps keep out moisture or dust. Be gentle with the flap as it is your friend.

Bluetooth Pairing

Select "MVA Beach Boom" in your Bluetooth menu on your smart device. Your Bluetooth must be On! If password is required, enter "0000". Keep your device within 3 feet of speaker to pair. When blue LED flashes quickly on your Beach Boombox it is in pairing mode and is "looking to connect". When Blue LED flashes every 2 seconds it is paired. Speaker will automatically pair with last connected device. To connect with another device "long press" MFB button "phone". The speaker will say "looking to connect". Repeat above process.

How to Recharge Beach Boombox

Charge via the Micro USB & included cable from any USB power port. Fully charge unit before use about 3-4 hours. Red LED indicates charging. Charging is complete when LED is Off.

Play Your Music & Start the Party

Press play on either your music player or Beach Boombox.

Select Tracks

Short press |< or >| buttons to play previous or next track.

Adjust Volume

Long press V+ or V- buttons to increase or decrease volume.

Call Answer / Phone Function

Press the "phone" button (MFB) Multi-Function Button to take a call.

CANCEL CALL - "Short Press" MFB Button

REJECT CALL - "Long Press" MFB Button

END A CALL - "Short Press" MFB Button

REDIAL - "Short Double Press" MFB Button



Radio Function

Press "M" for mode to select Radio. Unit will auto scan for best reception radio station(s) when the "Pause" button is pressed (long press). Then select via </> (short press) to advance up or down to next station.

Aux in Mode

Automatically switches to 3.5mm input when cable is plugged in, Bluetooth is disconnected when Aux input receives cable. Aux input is located under rear splash flap!

TF/SD Card Reader / Music File Player

Card must be inserted in back of unit prior, switch to "Music Player" mode & push play! </> will select next or previous track.

Specifications

Bluetooth Version	3.0
Bluetooth Profiles	HSP, HFP, A2DP, AVRCP
Bluetooth Operating Distance	Approx. 10 meters (33 feet)
Music Playback Time	4-6 Hours
Talk Time	Up to 10 Hours
Stand By	230 Hours
Water Resistant	IPX4
Charging Input	DC5V
Charge Time	3-4 Hours
Battery	2200mAh

Note:

Battery life & charging time may vary, based on usage & types of devices used. Abuse is never covered under warranty and no one likes a party pooper.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, this is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a different circuit than the one to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by Mitek Corporation could void the user's authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Get Social With Us!

Follow us on Facebook to keep up to date with the latest island inspired product news and always listen to the Sound of Paradise wherever the winds take you.



www.facebook.com/MargaritavilleAudio



BEACH BOOMBOX

WATER RESISTANT

BLUETOOTH BOOMBOX

Part# MVABB1GW
www.margaritavilleaudio.com

©2015 Mitek Corporation. MTX is a registered trademark of Mitek Corporation. Margaritaville is a registered trademark of Margaritaville Enterprises LLC. All other trademarks are the properties of their respective owners. Due to continual product development and improvements, the contents of this document including all pricing, specifications, and terms are subject to change without notice.

MVA005156 RevB 4/15 • 21A10405 • AW0015097

